



# iView2 - iSmart RS232 Communication Tutorial

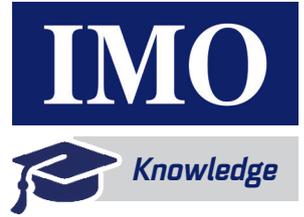

This document illustrates the method to connect the iView2 Advanced HMI to the iSmart Intelligent Relay via the programming port.

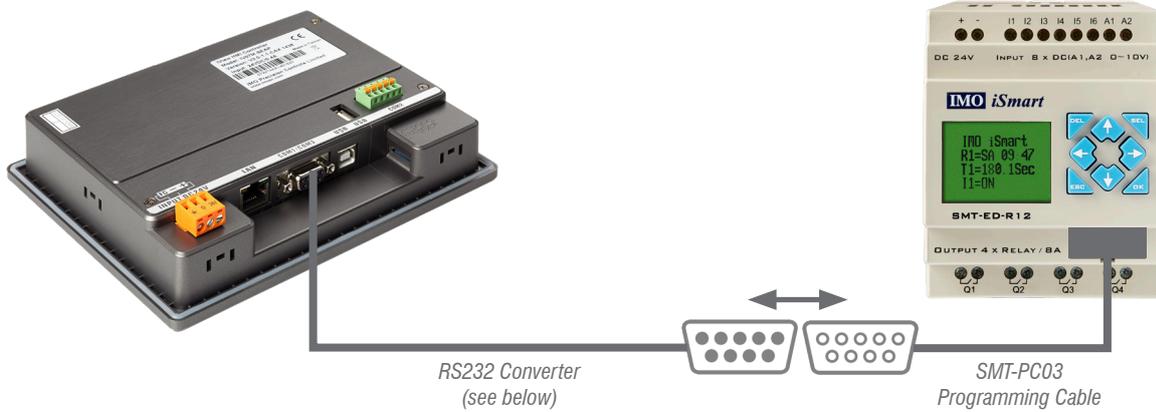


## RS232 Converter Wiring Diagram

Male 9-pin RS232C Connector to iSmart Programming Cable

Male 9-pin RS232C Connector to iView COM1

Wire DB Type Serial Connector to iView COM1

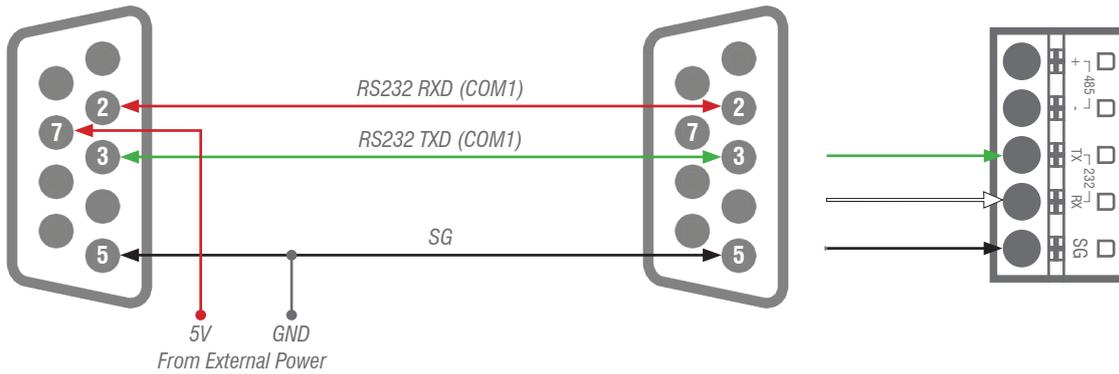

The 5V external power can be supplied from USB port or external 5V power supply. The USB port in the iView has 5V output which can be used to power-up.

## USB Power Wiring Diagram



Pin	Signal	Colour	Description
1	Vcc	Red	+5V
4	GND	Black	Ground



[www.imopc.com](http://www.imopc.com)

### IMO Precision Controls Ltd

Unit 3, The Interchange, Frobisher Way  
Hatfield, Hertfordshire AL10 9TG UK

Tel: +44 (0)1707 414 444  
Fax: +44 (0)1707 414 445

Email: [sales@imopc.com](mailto:sales@imopc.com)  
Web: [www.imopc.com](http://www.imopc.com)



Bespoke technical training courses available at our Hatfield training facility. Call 01707 414 444 for more information